




E)

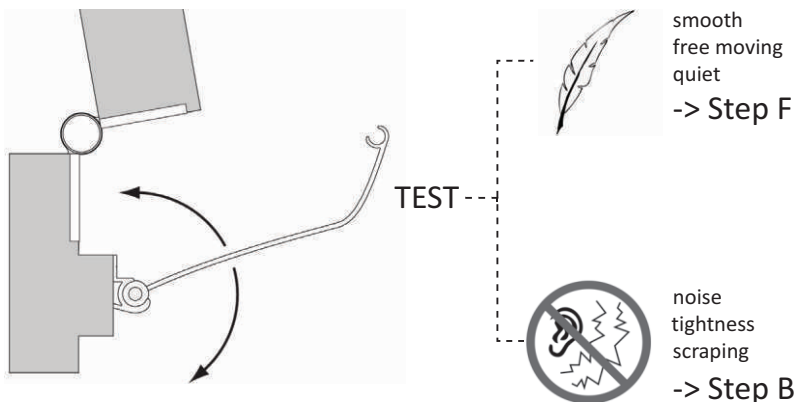

F)

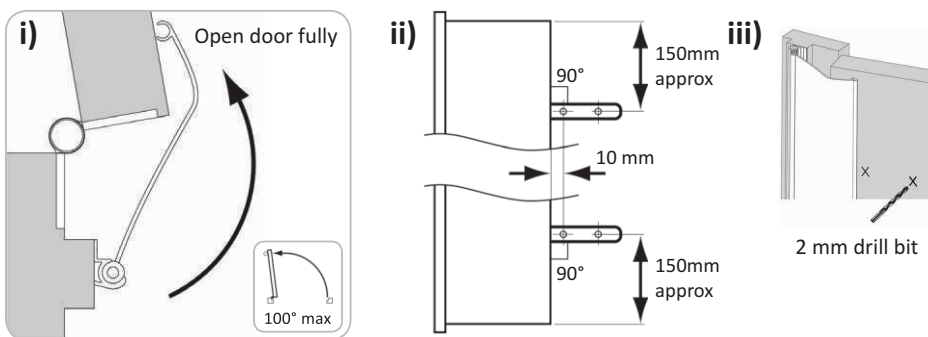

G)

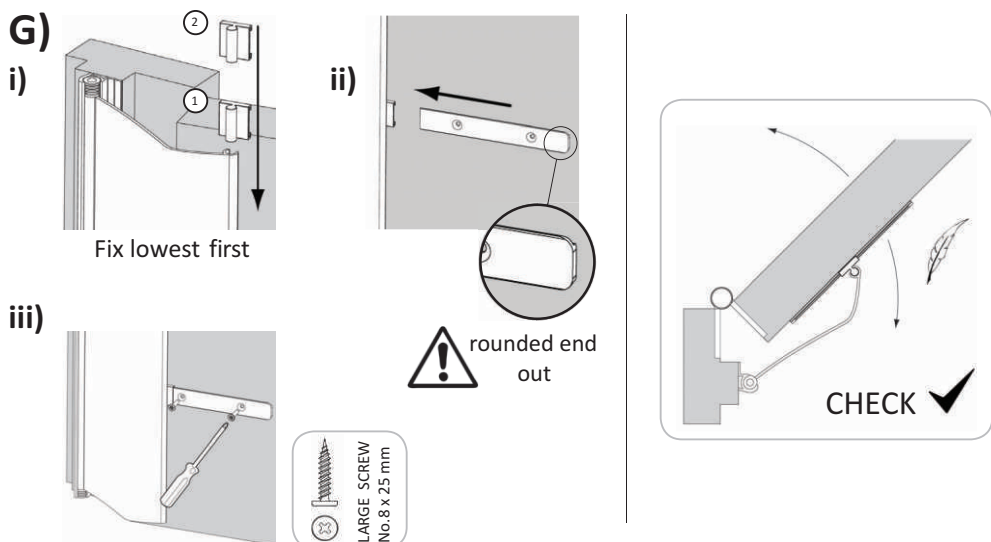


NORSOUND

Norsound NOR250


Installation Instructions

Designed for :


Door thickness

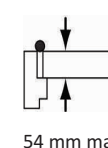




Opening angle

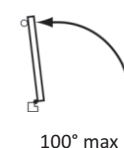

Clear width

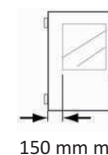


Kickplate

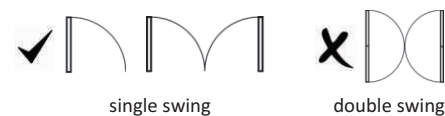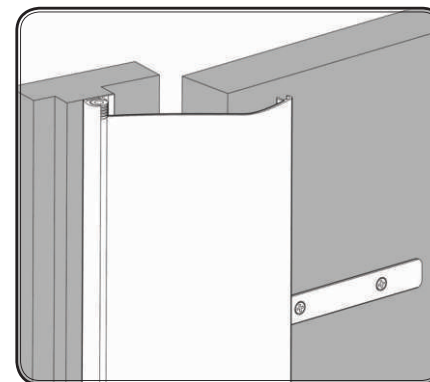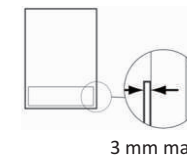

Parts list

	250 G2	250 G3
1) NOR250 assembly	1	1
2) Connector	2	3
3) Guiderail	2	3
4) 1 mm Packer	6	6
5) Large screw (No.8 x 25 mm)	4	6
6) Small screw (No.6 x 18 mm)	4	4

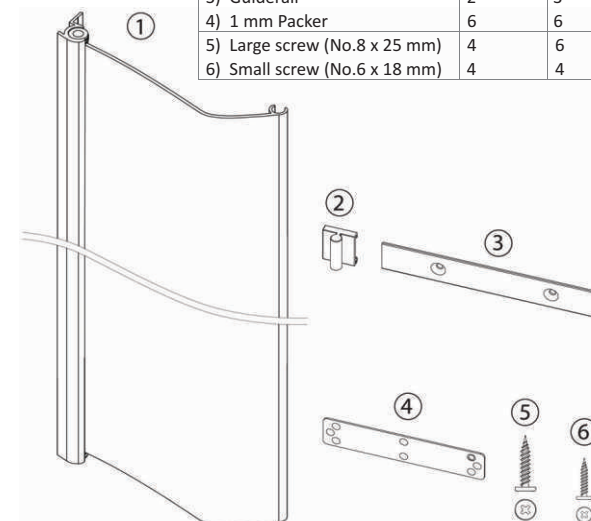

Tools required

2 mm drill bit


pencil / marker

crosshead screwdriver





NORSOUND

T: + 44 (0) 1661 831 311
F: + 44 (0) 800 298 4868
E: info@norsound.com
W: www.norsound.co.uk

A)

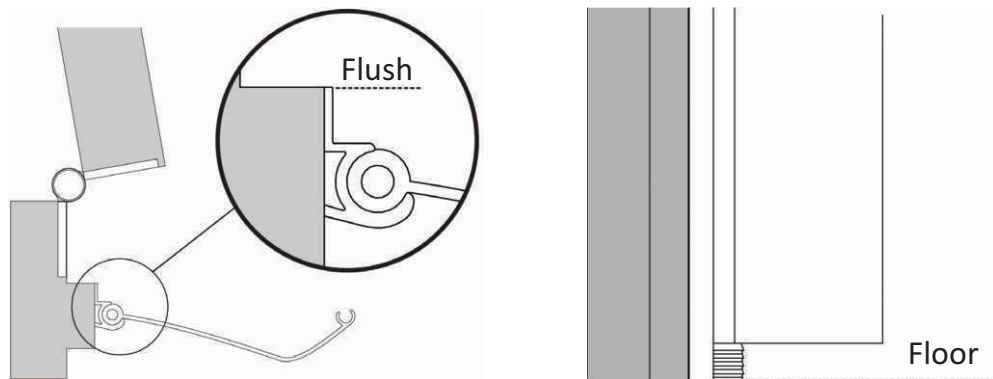


B) **X**

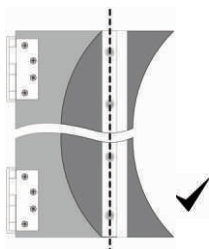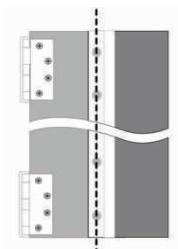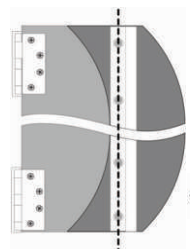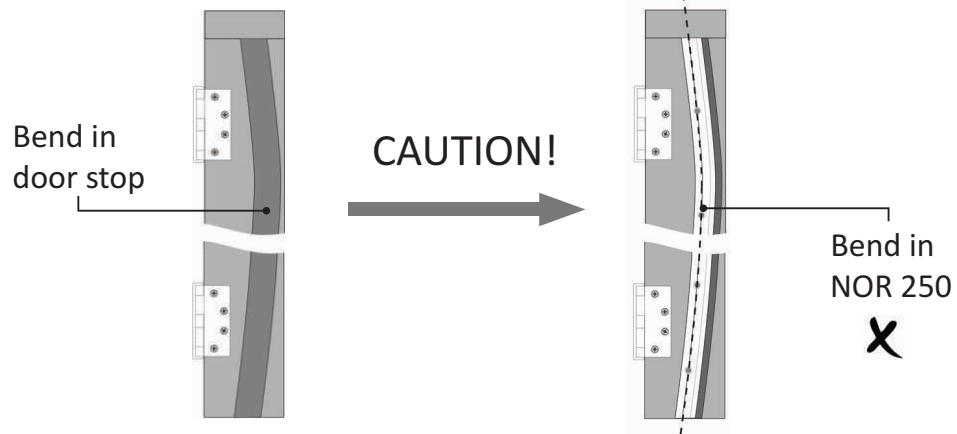


C)


i)

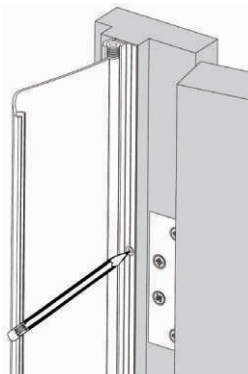


ii)

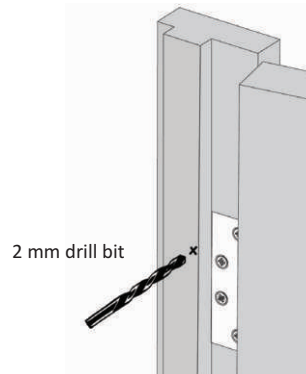


D) **X**

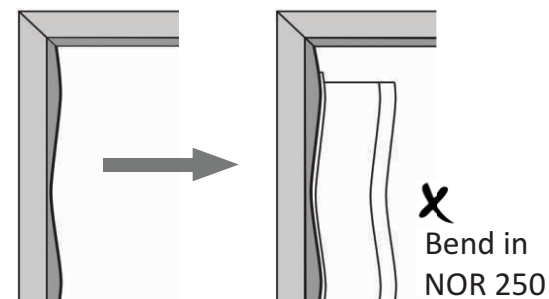

i)

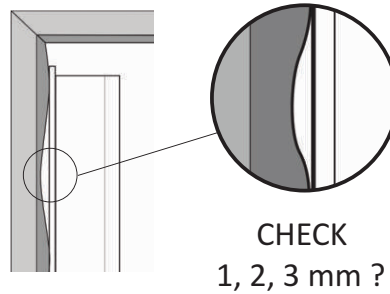

ii)

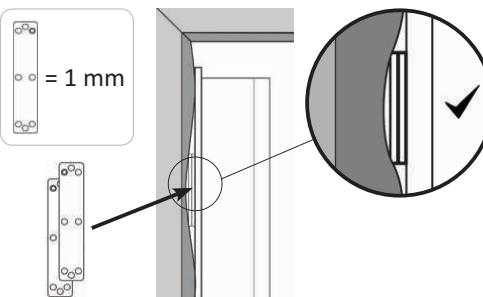

iii)

