


### Tools




Included:  
1x NOR 720


All dimensions in mm

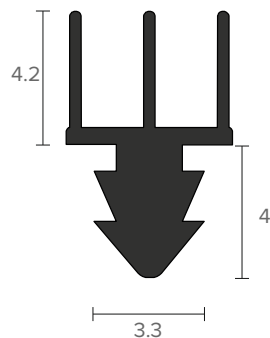

Colour	Code/Length
White	NOR720/W-2100 NOR720/W-3000
Black	NOR720/BK-2100 NOR720/BK-3000
Brown	NOR720/B-2100 NOR720/B-3000

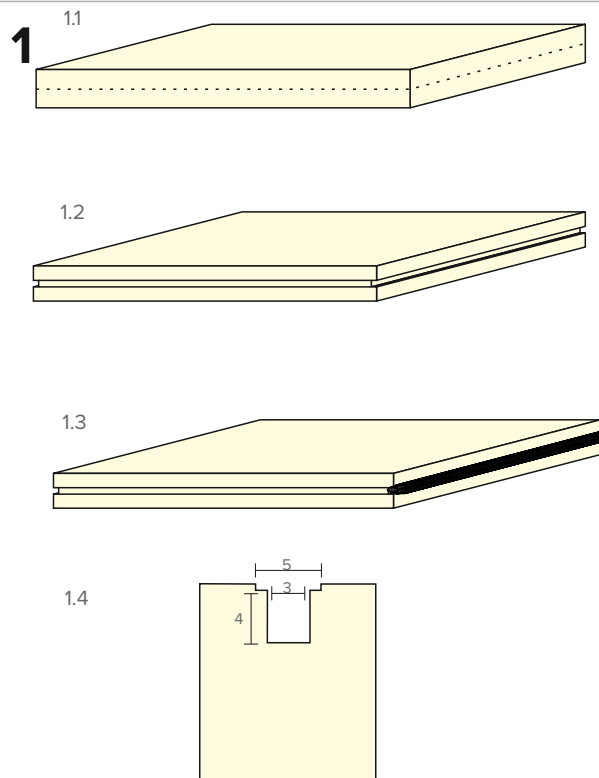

- 1.1** Remove the door from its hinges. lay on its side and restrain firmly. Using a straight edge mark a line for cutting.
- 1.2** Using a power saw with a 3mm wide blade cut a 4mm (kerf cut) groove along the door.
- 1.3** push the NOR720 into the groove and cut ends at 45° to ensure a continuous seal around the door.
- 1.4** If the gap between the door and its frame is less than 3mm set a 5mm wide router bit to a suitable depth to achieve fitment required.

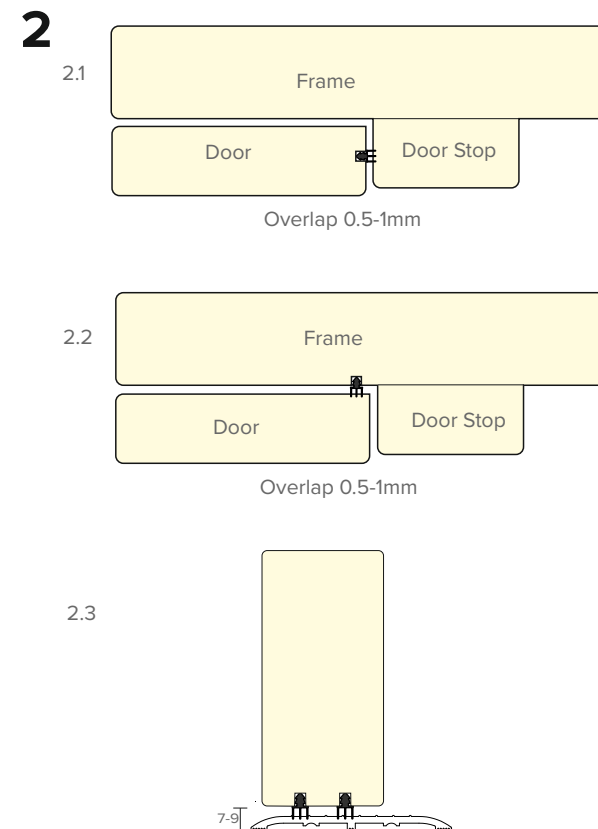

- 2.1** The NOR720 should overlap the door stop by 0.5-1mm.
- 2.2** If fitting to the frame it must have the groove cut prior to installation.
- 2.3** The NOR 720 can be used as a door bottom seal when used with a threshold plate, the gap between floor to door bottom should be 7-9mm