



## NOR200 Flat Doors and Frames Fitting Instructions

### Tools





Included:  
1 x Wide Strip  
1 x Click Strip  
Fixings

All dimensions in mm


Wide Strip

Click Strip

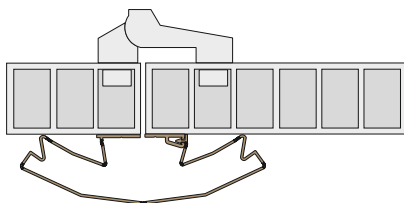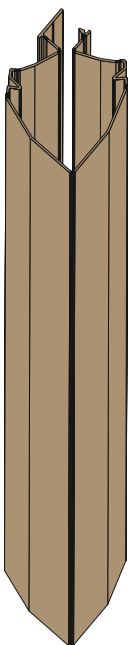


# 1


1.1

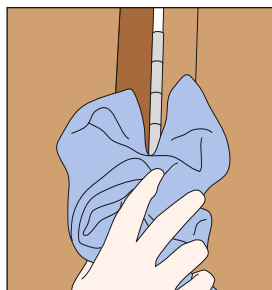

1.2

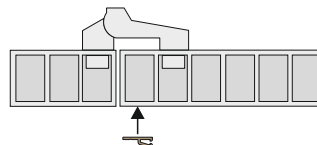

1.3

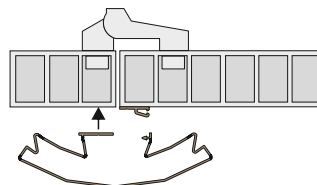




**1.1** Clean and dry the door and door frame thoroughly.

**1.2** Peel off the self adhesive backing from the click strip and fix to the door starting 15mm from the bottom ensuring the strip is flush with the edge of the door.

**1.3** Peel off the self adhesive backing from the wide strip and fix to the frame starting 15mm from the bottom ensuring to keep flush with the edge of frame.

# 2

2.1

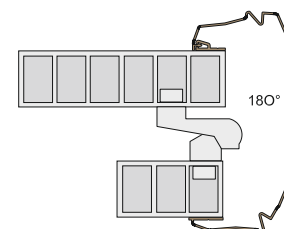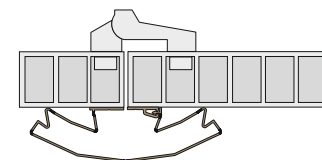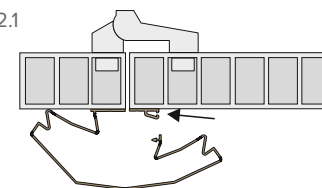

**2.1** Push the other end of the wide strip into the click strip firmly ensuring the full length is clicked into place.